

Assembly Instruction


Article No: WH010985

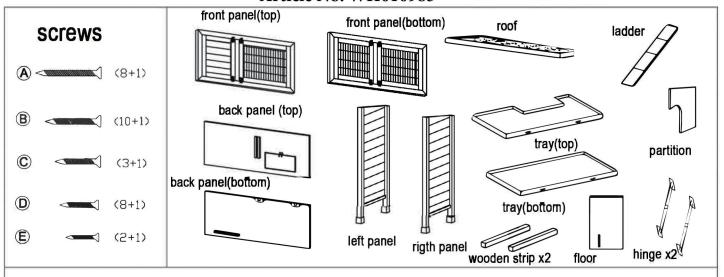




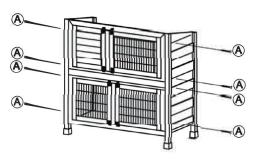


1. Attach the front panels(top and bottom) to the left and right panels using 8 xA screws.

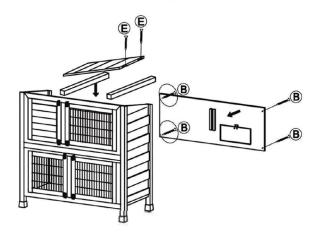


3. Secure the back panel(top) to the left and right panels with 4 xB screws.Place the wooden strips to fix the ladder location.Fix the ladder with 2 xE screws.

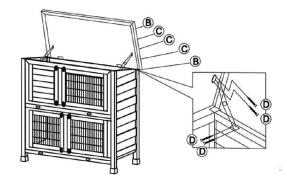

5. Attach the roof to the back panel(top) using 2 xB and 3 xC screws. Fix the hinges to the left and right panels and the little piece of wood on the underside of the roof.

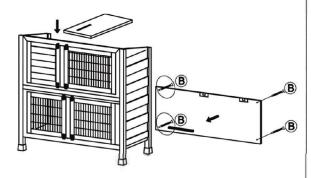

Secure the back panel(bottom) to the left and right panels with 4 xB screws. Place the floor (on the left side).

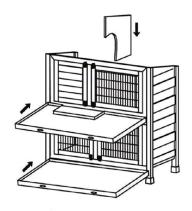

Slide in the top tray and bottom tray and the partition.



6. Your cottage is now ready!

Mail: Kundservice@gardenstore.se