



CLIMBER PRO©

SKU: PR010999



ANVÄNDARMANUAL

Tack för att du har köpt en Pooli poolrobot. Om du har några frågor eller problem, vänligen kontakta kundservice hos din lokala återförsäljare.

Innehållsförteckning


VIKTIGA FÖRSIKTIGHETSÅTGÄRDER	1
I. FÖRBEREDELSE	3
II. SÄKERHET	3
III. SPECIFIKATIONER	4
IV. DRIFTSINSTRUKTIONER	4
4.1 INSTRUKTIONER - DRIFTPANEL	4
4.2 MODELL MED INBYGGD ANTENN	5
4.3 INSTRUKTION FÖR MANÖVERPANEL	5
4.4 APPSTYRNING FRÅN SMARTPHONE VIA BLUETOOTH	9
4.5 TA UR ROBOTEN UR VATTEN	11
4.6 FILTERRENGÖRING	12
4.7 FÖRVARINGSRÅD	13
V. FLÖTE	14
VI. PACKLISTA	15
VII. GARANTI	15

Viktiga försiktighetsåtgärder

1. Läs igenom manualen noga och använd roboten i enlighet med manualen. Vi är inte ansvariga för förlust eller skada orsakad av felaktig användning.
2. Låt inte barn åka på eller leka med poolroboten.
3. För att undvika allvarliga skador på roboten, slå aldrig på strömmen när den inte är i poolen.
4. Det är förbjudet att använda roboten när det finns människor i poolen. Strömförsörjningen ska vara kopplad till ett restströmsskyddat och jordat uttag.
5. För att undvika överhettning och eventuella skador på komponenterna, täck aldrig över strömförsörjningen.
6. För att undvika olyckor eller skador rekommenderar vi starkt att ansluta strömförsörjningen inomhus, på minst 3,5 meters avstånd från poolkanten, och anslutet till en fast hållare med ett säkerhetsrep.
7. Innan strömmen slås på, se till att filtren sitter på plats och att kabeln är fullt utsläppt för att därmed undvika trassel, vilket kan påverka robotens prestanda och orsaka skada.
8. Håll i handtaget upptill när roboten sänks ner i och lyfts upp ur vattnet. Dra inte i kabeln.
9. Använd inte roboten för andra ändamål än de som anges i manualen.
10. Poolroboten ska förvaras på en sval ventilerad plats, borta från direkt solljus.
11. Endast tekniska experter får ta isär roboten och dess strömförsörjning, annars gäller inte garantin.
12. Tappa inte och orsaka ingen åverkan på batteriet eller roboten.
13. Använd endast tillbehör som rekommenderas eller säljs av tillverkaren.
14. Det är absolut förbjudet att hälla reningsmedel i roboten. Om så sker gäller inte garantin.

Observera

1. För att undvika repor på poolen, rikta robotens undersida mot poolväggen när den sänks ner eller lyfts upp ur poolen. Håll i handtaget upptill och sänk ner den i poolen. Låt roboten sjunka ner till poolbotten efter att all luft inne i roboten har släppts ut (all luft måste tömmas ut helt och hållet, annars kan robotens prestanda påverkas).

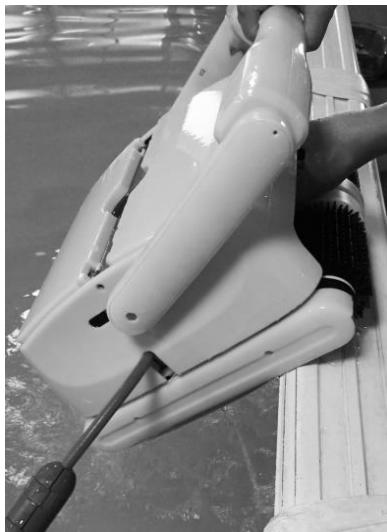

2. Håll alltid bara i handtaget upptill och dra aldrig i sladden när roboten lyfts upp ur poolen.



I. Förberedelser


Poolrengörare PR010999 är en ny typ av energisparande poolrobot. Genom sitt avancerade datastylda program rengör den automatiskt både väggar och botten i poolen. Samtidigt filtrerar den vattnet i poolen och tar bort uppslammade partiklar utan att vattnet behöver bytas – absolut miljövänligt.

Poolroboten drivs med 28 V likström för att ge trygg och säker drift.

Läs denna användarmanual noggrant för användning.

II. Säkerhet

Strömförsörjningen ska vara placerad på ett lämpligt ställe så att hela poolens yta kan nås, och på minst 3,5-meters avstånd från poolkanten.

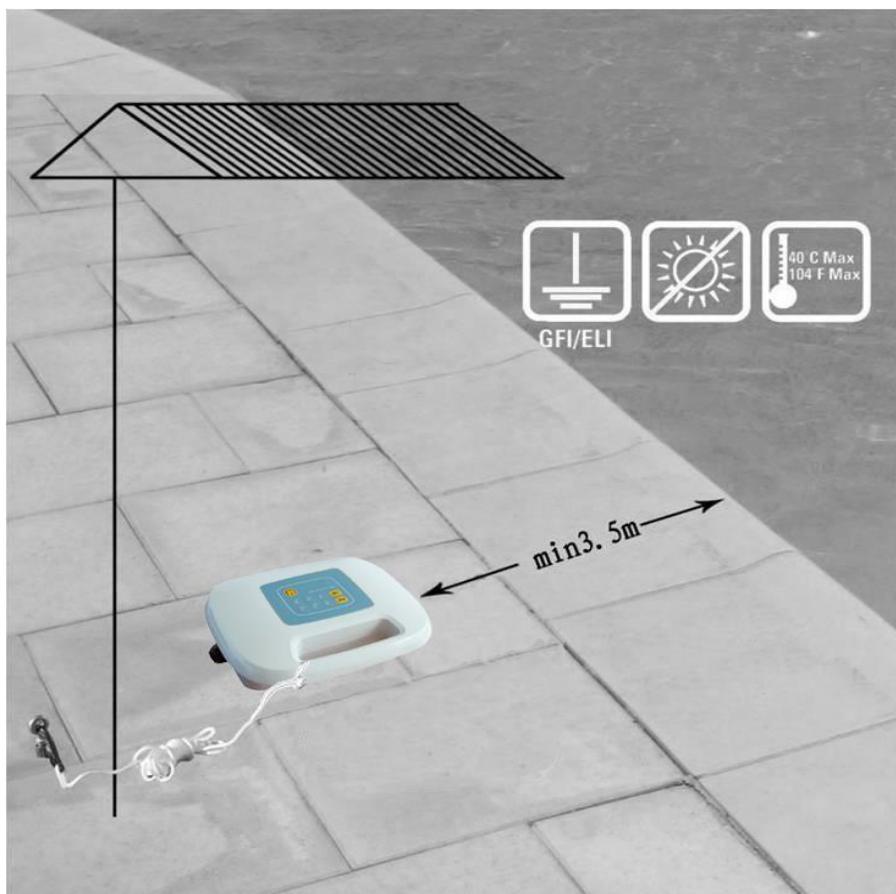

III. Specifikationer

VARNING:

- Använd endast den medföljande nätaggregatet.
- Sänk inte ner strömförsljningsenheten i vatten.
- Koppla inte från strömförsljningsenheten innan du rengör vattnet.
- Koppla ur strömförsljningsenheten före varje serviceaktivitet

Se till att eluttaget är skyddat av en jordfelsbrytare (GFI) eller en jordfelsbrytare (ELI)

1. Nominell ingångsspanning: 220 V AC (230 V AC) / 110 VAC (120 VAC)
2. Frekvens: 50Hz/60Hz
3. Utgångsspanning: DC 28 V
4. Effekt: Robot 112 W
5. Rengöringscykel: 1/2/3 tim
6. Filterkapacitet: ca. 16 m/tim
7. Filterdensitet: 180 µm
8. Förflyttningstakt: ca. 1,5 m/min
9. IP-klass: Robot IPX8; Strömförsljning: IPX5
10. Max. vattendjup: 2 m
11. Driftstemperatur: 0 °C -40 °C
12. Arbetsläge: Alla / Endast golv / Endast vägg / 3 gånger golv, på vägg
13. PH: 7.0–7.8
14. IP -klass: Robot IPX8; Kraftenhet IPX5

IV. Driftsinstruktioner

4.1 Instruktioner - driftspanel


Utläggning av kabel

Varva ner kabeln som krävs för att täcka hela poolstorleken, rak kabel längs poolen sida och se till att det inte finns några vridningar.

Placera strömförsljningsenheten på rätt plats Strömförsljningsenheten måste placeras på rätt plats för att lagra täckningen för hela poolen, under tiden minst 3,5 meter från poolkanten.

4.2 Placera städaren i vattnet

Håll i handtaget och placera poolroboten i poolen med robotens botten mot väggen för att undvika eventuella repor.

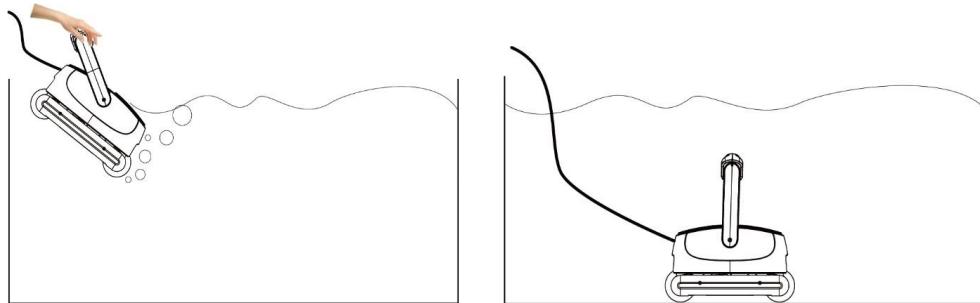

4.3 INSTRUKTION FÖR MANÖVERPANEL

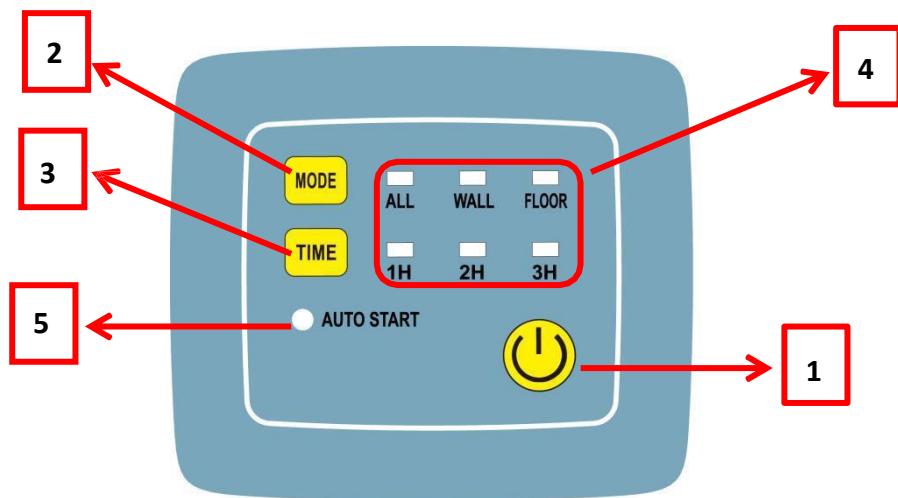
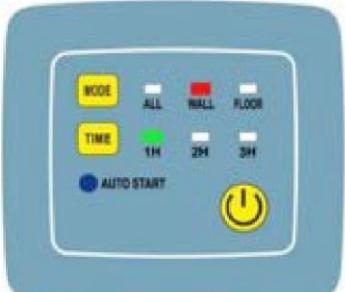
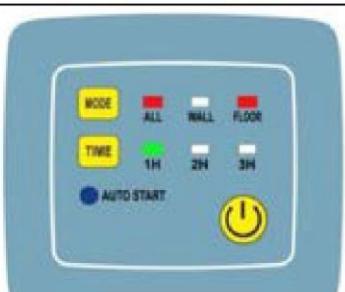
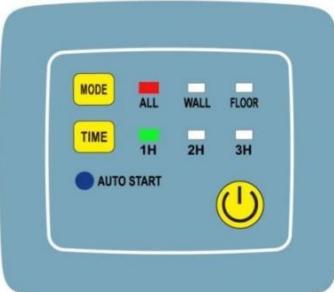
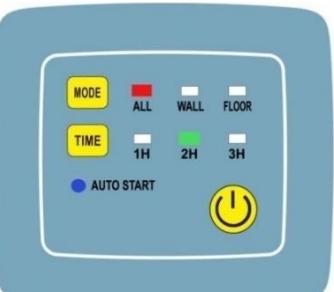
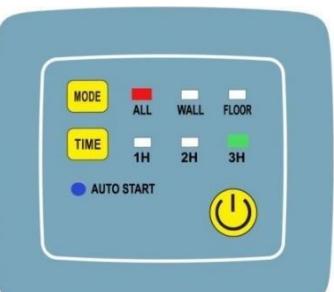


Bild 4-1 Instruktioner för knappar och indikatorer


Nr	Indikator	Instruktion	funktionsbeskrivning
1	PA/AV	Strom pa/av	Tryck på denna knapp för att starta roboten. Tryck en andra gang för att slå av roboten.
2	LAGE		ALL: för att rengöra poolens batten, vaggar och vattenlinje •(batten en gang, vaggar en gang)
			WALL: för att endast rengöra poolens vaggar
			FLOOR: för att endast rengöra poolens batten
			ALL+ FLOOR: för att rengöra poolens batten tre gånger och väggarna en gang

			1H: roboten är i drift 1 timme
3	TID		2H: roboten är i drift 2 timmar
			3H: roboten är i drift 3 timmar
	Indikerar driftläge och rengöringsstatus		
4	Indikatorer	Driftstatus	2 eller 3 indikatorer på Roboten stannade
			“1H” blinkar sakta Roboten är i drift i 1 timme
			“2H” blinkar sakta Roboten är i drift i 2 timmar
			“3H” blinkar sakta Roboten är i drift i 3 timmar
			“ALL” på Arbetar i läge “ALL”
			“WALL” på Arbetar i läge “WALL”
			“FLOOR” på Arbetar i läge “FLOOR”
			“ALL” & “FLOOR” på Arbetar i läge “ALL” & “FLOOR”
			“ALL” >> “WALL”>>“FLOOR” blinkar i följd Manuell: framåt
			“FLOOR” >> “WALL”>>“ALL” blinkar i Manuell: bakåt



		följd		
		“3H” >> “2H”>>”1H” blinkar i följd	Manuell: vänster vändning	
		“1H” >> “2H”>>”3H” blinkar i följd	Manuell: höger vändning	
		Alla indikatorer blinkar sakta	Autokörning avslutad	
		Kod	Fel	Förslag
	Diagnos	Alla indikatorer blinkar snabbt och ljuder	Strömförsörjningen är överbelastad	Avbryt användningen och kontakta service
		“WALL” & “2H” blinkar snabbt och ljuder	Driftsmotor 1 är överbelastad	Kontrollera remmen
		“FLOOR” & “3H” blinkar snabbt och ljuder	Driftsmotor 2 är överbelastad	Kontrollera remmen
		“WALL”, “FLOOR”, “2H” & “3H” blinkar snabbt och ljuder	Roboten är tom på vatten och kan inte startas	Släpp ut luften i roboten och starta igen
5	AUTO START	Automatisk startfunktion	Indikatorn av: ingen tidsinställning gjord	
			Indikatorn lyser med fast sken: tidsinställning genomförd, väntar på att starta	
			Indikatorn blinkar: påbörjar drift	

4.4 Appstyrning från smartphone via Bluetooth

4.4.1 Första gränssnitt

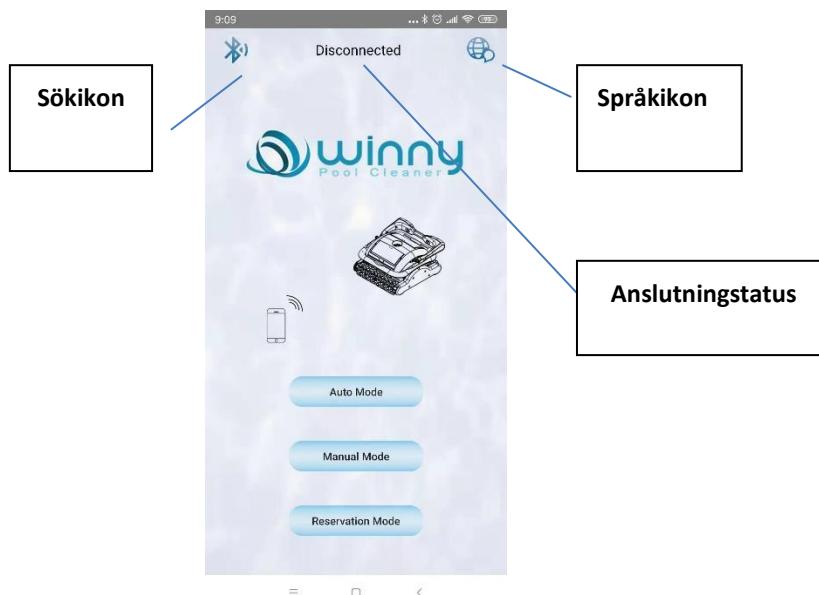

Öppna appen och anslut den till roboten

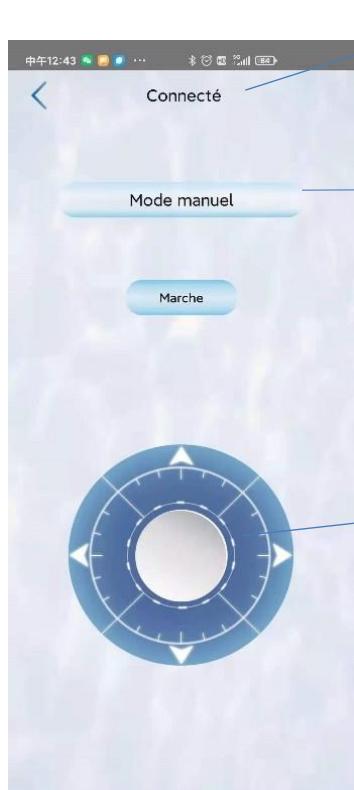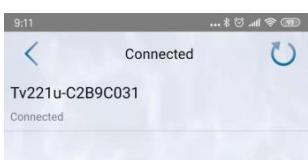

4.4.2 Interface of manual operation

No	Indikation	Funktion
/	Anslutningsstatus	<ul style="list-style-type: none"> Fräckkopplad Ansluten
2	Starta rengöring	Tryck "start the cleaner"
3	Riktningsknapp	Tryck på knappen till vänster; höger, framåt och tillbaka till; flytta roboten, den; närmare knappen; kanten av området, desto snabbare; roboten rör sig
4	Riktningskontroll; Område	

1


2

3



4

4.4.3 Gränssnitt för automatisk drift

Nr	Indikator	Funktion
1	Anslutningsstatus	<ul style="list-style-type: none"> ● Ej ansluten ● Ansluten
2	Auto-läge	<ul style="list-style-type: none"> ● Poolbotten – rengör endast botten ● Poolväggar – rengör endast väggar ● Botten rengörs en gång, väggar en gång ● Botten rengörs tre gång, väggar en gång
3	Startar rengöring	<ul style="list-style-type: none"> ● Auto-drift: arbetar automatiskt enligt dina inställningar ● Stop: stannar den automatiskt driften

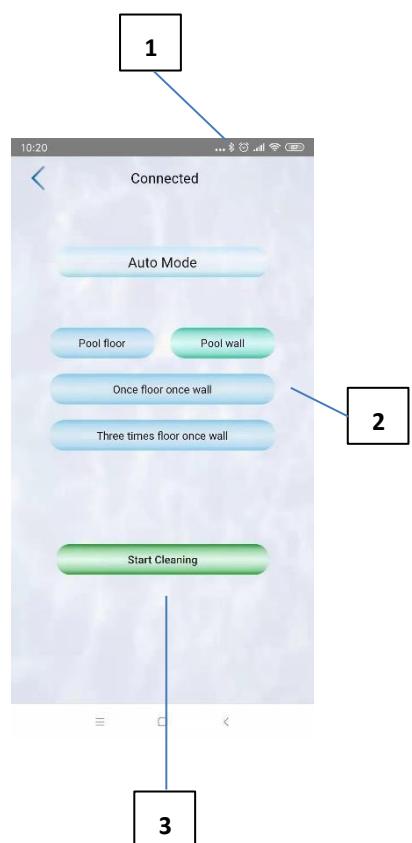

4.4.4 Gränssnitt för "Auto Start"

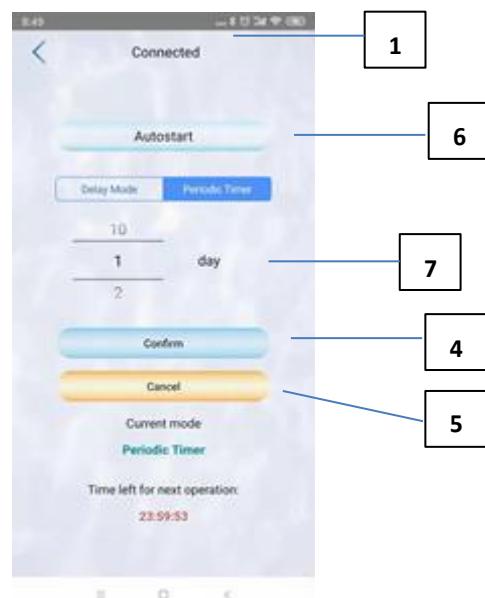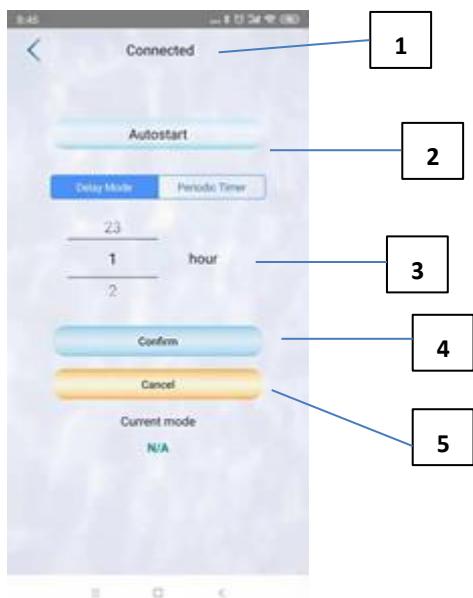

Nr	Indikator	Funktion
1	Anslutningsstatus	<ul style="list-style-type: none"> • Ej ansluten • Ansluten
2	En rengöring	Födröjd start
3	Inställning för en rengöring	Intervall: 1– 23 timmar
4	Bekräfta	Genom att trycka på den här knappen kommer appen på smartphonen att skicka den gjorda tidsinställningen till strömförsörjningen via Bluetooth och samtidigt starta timern.
5	Avbryt	Tryck på den här knappen för att avbryta den gjord tidsinställning
6	Upprepand rengöring	Cyklistisk drift
7	Inställning för upprepand rengöring	Intervall: 1 – 10 dagar

VARNING:

Strömenheten måste vara påslagen i mer än åtta timmar när du ställer in reservation. Annars kan bokningen misslyckas

4.4.5 Nerladdningsadress

För Android: sök ”Opson Pro” i Google Play (*Kräver Android 8.0 och senare)


För IOS: sök ”Opson Pro” i Apple Store (Kräver iOS 12.0 eller senare)

4.5 Ta ur roboten ur vattnet

Dra försiktigt i flytkabeln tills poolrengöringen har kommit upp på ytan och lyfts sedan i handtaget.

Varng:

- Koppla ur strömförsörjningen innan du tar ur vattenrenaren.
- Om städaren inte har avslutat sin cykel, stäng av och koppla ur strömförsörjningsenheten.
- Lyft INTE renan från vattnet med sin kabel

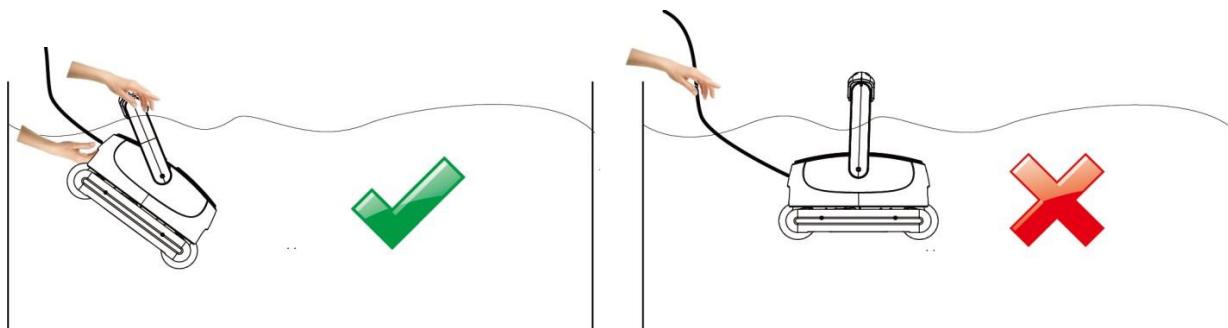

4.6 Filterrensgöring

4.6.1 Ta ut filterkorgarna:

- a. Tryck på öppningsknappen (se Bild 1)
- b. Det övre locket öppnas upp automatiskt (se Bild 2)
- c. Lyft upp det övre locket (se Bild 3)
- d. Ta ut filterkorgarna (se Bild 4)

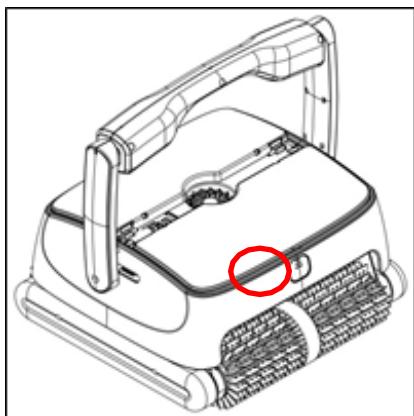


Bild 1

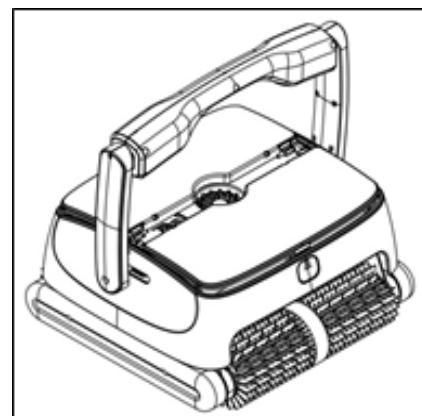


Bild 2

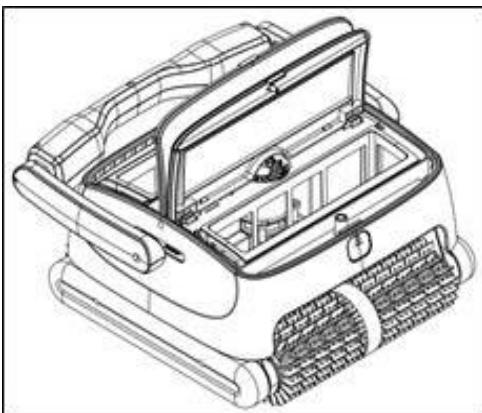


Bild 3


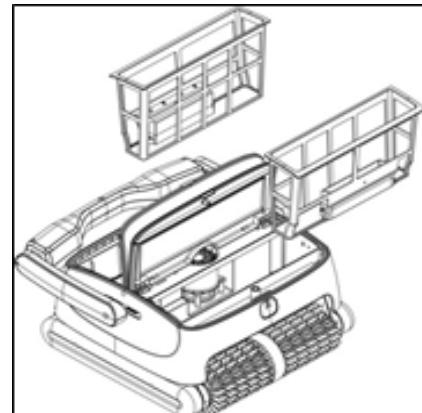



Bild 4

4.6.2 Rengör filterkorgarna

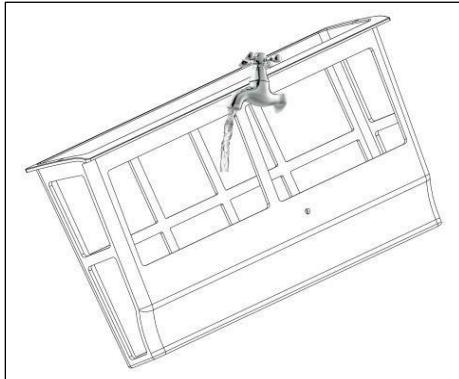

4.6.3 Sätt tillbaka filterkorgarna

Var noga med att sätta i korgarna i rätt läge och stäng det övre locket.

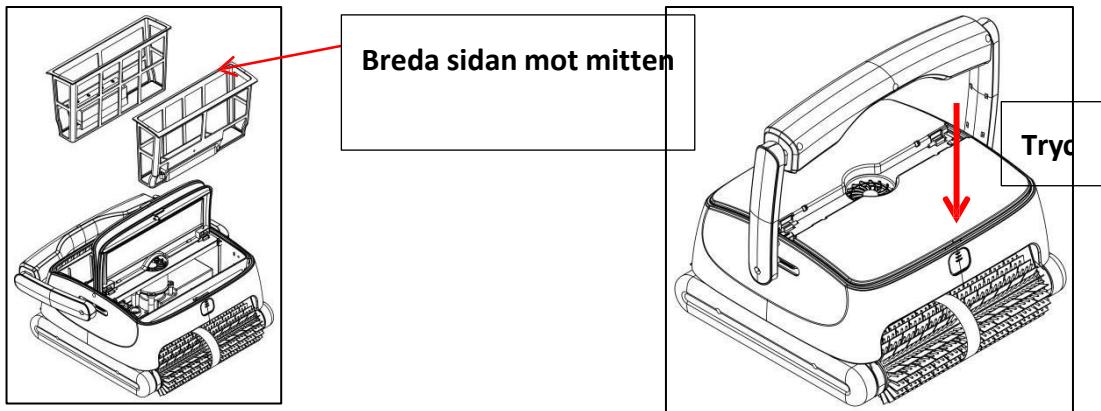

4.7 FÖRVARINGSRÅD

Dra ihop kabeln och förvara renare på en sval och ventilerad plats.

- Förvara INTE renare utsatt för direkt solljus, överdriven hörsel och frost.
- Städarna bör förvaras under förhållanden som 5°C-35°C (50°F)-35°C (95°F) RH<75 %

V. Flöte

Följ följande moment om det är svårt att få roboten att klättra på väggen och rengöra vattenlinjen.

Följande moment behöver inte utföras om roboten klättrar lätt på väggen.

Öppna locket upptill och fäst flötet i det läge som visas på bilden nedan. Fäst även ett flöte på andra sidan.



Obs:

1. Man kan även fästa flötet ovanpå locket utan att ta bort locket. Vridrör läget med dina händer och fäst flötet enligt bilden.
2. Flötet har klister på baksidan. Det måste därför fästas på locket ordentligt för att sedan sänkas ner i poolen först 24 timmar senare.

VI. Packlista

Nr	Artikel	Namn	Modell	Antal	Applikation	Anmärkning
1	Robot	Robotaggregat	PR010999	1		I kartong
2		Strömförsörjning	PR010999	1		I kartong
3		Användarmanual, certifikat & säkerhetsrep		1		I plastpåse

VII. Garanti

Den här produkten har genomgått alla kvalitetskontroller och säkerhetstester som utförs på fabrikens tekniska avdelning.

Garantiinformation:

1. Garantin gäller i 24 månader (endast för motor och kretskort/PCB) från ursprungligt inköpsdatum.
2. Garantin gäller inte om produkten har modifierats, felanvänts eller reparerats av icke-auktoriserad personal.
3. Garantin gäller endast tillverkningsfel och täcker inte skador som uppstår till följd av felanvändning av produkten.
4. Försäljningsfaktura måste uppvisas vid eventuella krav eller reparationer under garantiperioden.


OBS!

Skölj Poolroboten noggrant med vanligt kranvatten om du använt kemikalier eller desinfektionsmedel i poolen.

Kontakta din lokala återförsäljare för eventuella garantifrågor.

Miljöprogram, WEEE-direktivet
Vänligen respektera EU:s regler och hjälp till att skydda miljön.
 Lämna icke-fungerande elektrisk utrustning till en återvinningscentral i din kommun som återvinner elektrisk och elektronisk utrustning på lämpligt sätt. Kasta den inte i osorterade sopurnor.
För utrustning som har borttagbara batterier, ta bort batterierna innan utrustningen slängs bort.



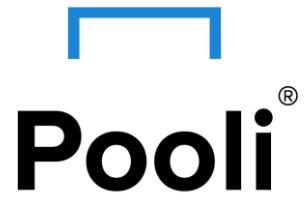

ROBOTIC POOL CLEANER

Climber Pro©

Art.nr: PR010999



USER MANUAL

Thank you for purchasing Pooli Robotic Pool Cleaner. If you have any questions or issues, please contact your local dealer for customer service.

Contents


IMPORTANT PRECAUTIONS	1
I. INTRODUCTION	3
II. SAFETY	3
III. SPECIFICATIONS	4
IV. OPERATION INSTRUCTIONS	4
4.1 Preparing cleaner for use	4
4.2 Placing the cleaner into water	5
4.3 Instructions for operation panel	5
4.4 App control on smartphone via Bluetooth	9
4.4.1 Initial interface	9
4.4.2 Interface of manual operation	10
4.4.3 Interface of automatic operation	10
4.4.4 Interface of "Auto Start"	11
4.4.5 Download address	13
4.5 Taking the Cleaner out of Water	13
4.6 Filter Cleaning	14
4.6.1 Take out the filter baskets	14
4.6.2 Clean the filter baskets	15
4.7 Storage advice	15
V.FLOATBLOCK	16
VI.PACKINGLIST	17
VII.WARRANTY	18

Important Precautions

1. Please read the manual carefully, and use the cleaner according to the manual. We are not held liable for any loss or injury caused by improper use.
2. Please do not allow children to ride on it or play with it as a toy
3. In order to prevent severe damage to the cleaner, never power on it when it is out of the swimming pool.
4. It is forbidden to operate the cleaner when there are people in the pool, and the power supply should be connected to a leakage- protected and earthed socket.
5. In order to avoid overheating and potential damage for components, never cover the power supply.
6. In order to avoid any accident or damage, it is strongly recommended to fix the power supply indoor in at least 3.5m away from the swimming pool edge and connect the power supply with a fixed holder by using the safety rope.
7. Before power- on, make sure the filters be assembled and the cable be fully released to avoid any winding, which could affect the cleaner's performance or cause damage.
8. Hold the top handle when putting the cleaner into or lift it out of the water. Do not pull the cable.
9. It is forbidden to use the cleaner beyond its working conditions stated in the manual.
10. The cleaner should be stored in a cool and ventilated place, away from direct sunshine.
11. Only professionals can disassemble the cleaner and its power supply, otherwise the warranty will be invalidated.
12. It is forbidden to drop and hammer the battery and cleaner.
13. Use the accessories recommended or sold by the manufacturer only.
14. It is strictly forbidden to place drugs for water treatment inside the cleaner for dosing, otherwise the warranty will be invalidated.

Attention

1. Put into or lift out of the pool with the cleaner bottom towards the wall to avoid any possible scratches to the pool. Hold the top handle and put it into the pool. Let the cleaner immerse into the pool floor after emptying the air inside it (the air inside should be exhausted completely, otherwise its normal working will be affected).

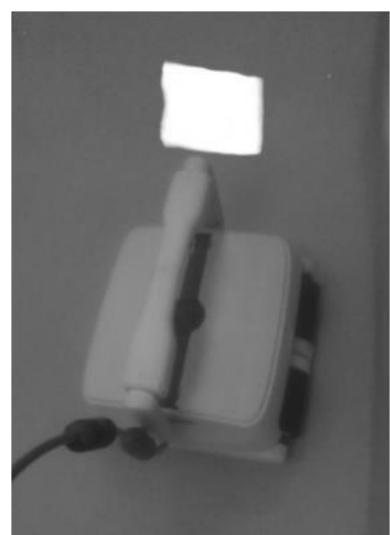

2. Please hold the tophandle only and never pull the cable when lifting it out of the pool.



I. Introduction


The robotic pool cleaner PR010999 is a new type of highly efficient and energy-saving swimming pool cleaning robot. Through its advanced computer-controlled program, it can clean the pool walls and bottom automatically. At the same time, it filters the pool water and gets rid of suspended particles without replacing the pool water. It is totally environmental-friendly.

For safe operation, the cleaner works on 28V direct current.

Please read this user manual carefully before use.

II. Safety

Power supply needs to be placed in a proper position so as to reach the coverage for the whole pool, meanwhile as least 3.5m away from the swimming pool edge.

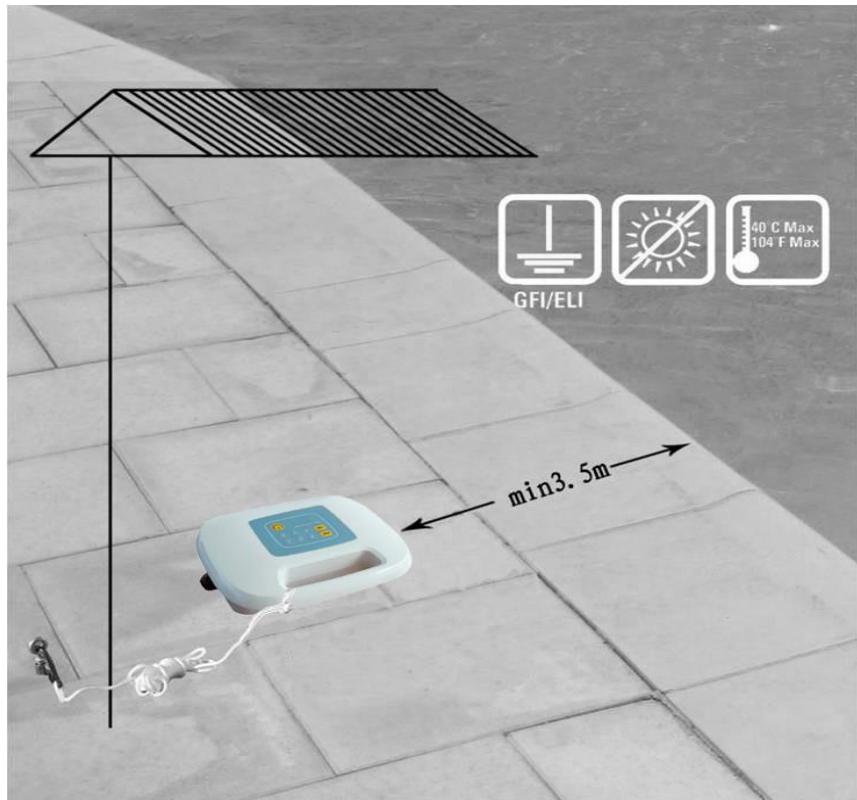

III. Specifications

CAUTION:

- Only use the original supplied power supply unit.
- Do not immerse the power supply unit in water.
- Do not plug the power supply unit in before placing the cleaner in the water.;
- Unplug the power supply unit before any serving activity.
- Ensure the power socket is protected by a ground fault interrupter (GFI) earth leakage interrupter (ELI)

1. Rated input voltage: 220VAC (230VAC)/110VAC (120VAC)
2. Frequency: 50Hz/60Hz
3. Output voltage: DC28V
4. Power: Cleaner 112W
5. Cleaning cycle: 1/2/3h
6. Filter capacity: appr. 16m³/h
7. Filter density: 180µm
8. Moving speed: appr. 10.5m/min
9. IP grade: Cleaner IPX8; Power supply: IPX5
10. Max. water depth: 2m
11. Working temperature: 0°C - 40°C
12. Working mode: All / Floor only / Wall only /3 times floor, once wall
13. PH: 7.0 – 7.8
14. IP grade: Cleaner IPX8; Power unit IPX5

IV. Operation instructions

4.1 Preparing the Cleaner for Use

Laying out the cable


Unwind required cable to cover the entire pool size, straight the cable along the pool; side, and make sure there are no twists.;

Placing the power supply unit on proper position; Power supply unit needs to be placed in a proper position so as to reach the coverage

for the whole pool, meanwhile at least 3.5m away from the swimming pool edge.

4.2 Placing the Cleaner into the Water

Hold the handle and place the cleaner into the pool with the cleaner bottom; towards;the wall to avoid any possible scratches.

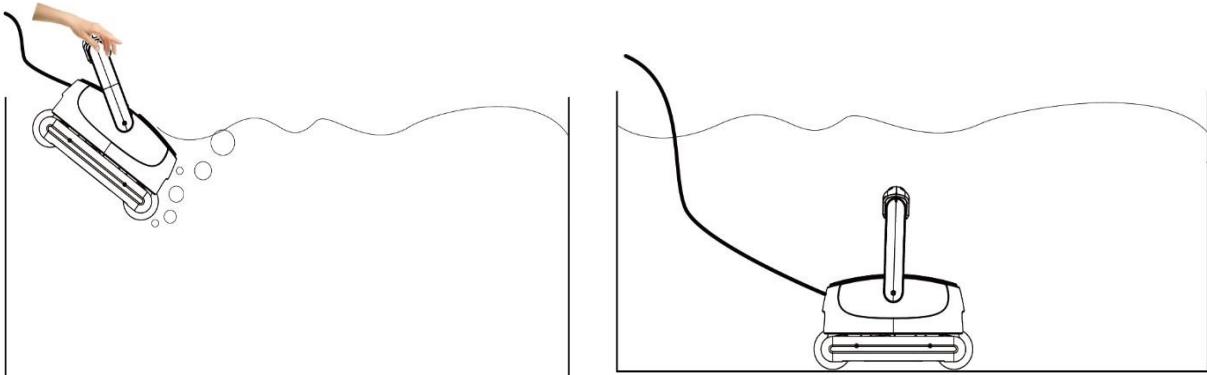

4.3 Instructions for operation panel

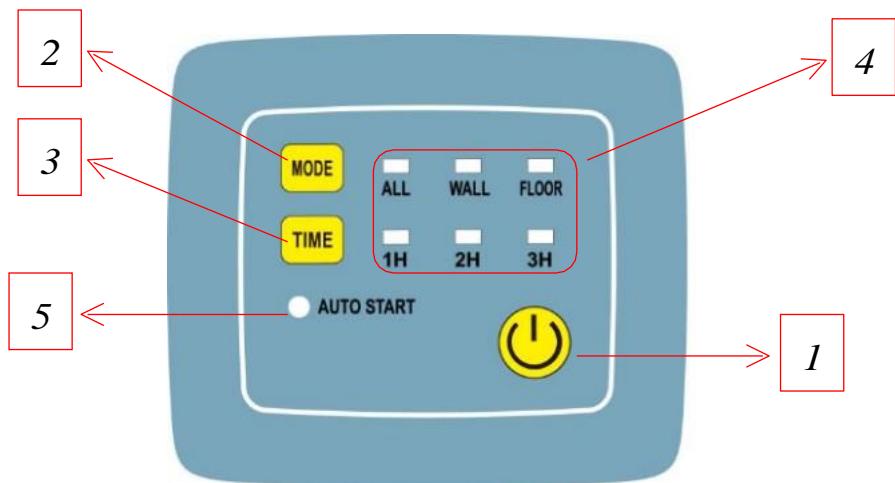
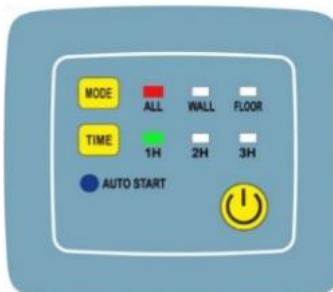
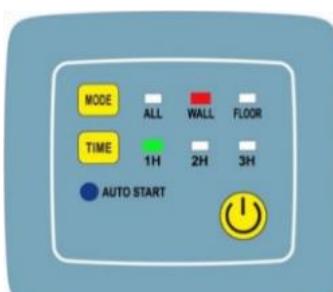
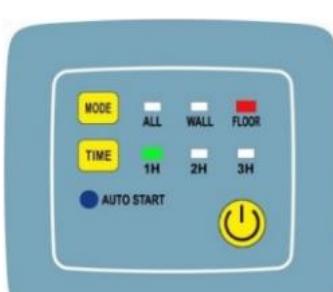
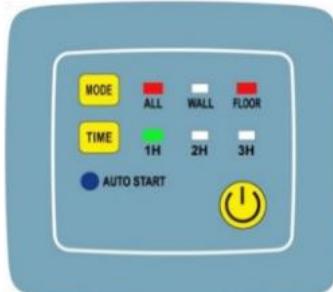
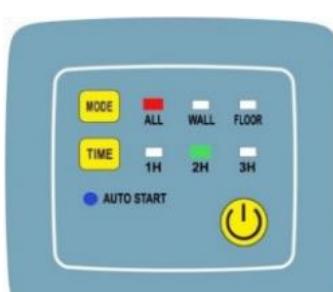
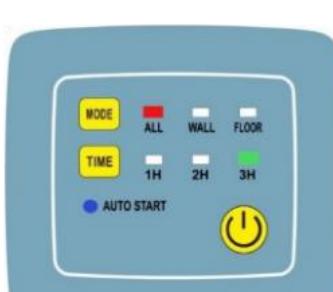



Table 4- 1 Instructions for button and indicator

No.	Sign	Instruction	Function description
1	ON/OFF	Power on/off	Press this button, the cleaner is power- on. Press a second time, the cleaner is off.
2	MODE		ALL: to clean pool floor, walls and waterline (once floor, once wall)
			WALL: to clean the pool walls only
			FLOOR: to clean the pool floor only

			ALL + FLOOR: to clean the pool floor three times and pool walls once	
3	TIME		1H: cleaner running for 1 hour	
			2H: cleaner running for 2 hours	
			3H: cleaner running for 3 hours	
				
4	Indicators	Indicate the operation modes and cleaner status		
		Working status	2 or 3 indicators on Cleaner stopped	
			"1H" flashes slowly Cleaner running for 1 hour	
			"2H" flashes slowly Cleaner running for 2 hours	
			"3H" flashes slowly Cleaner running for 3 hours	
			"ALL" on Working under mode "ALL"	


		“WALL” on	Working under mode “WALL”
--	--	-----------	------------------------------

			"FLOOR" on	Working under mode "FLOOR"
			"ALL" & "FLOOR" on	Working under mode "ALL" & "FLOOR"
			"ALL" >> "WALL" >>"FLOOR" flash in order	Manual: forward
			"FLOOR" >> "WALL" >>"ALL" flash in order	Manual: backward
			"3H" >> "2H">>"1H" flash in order	Manual: left turning
			"1H" >> "2H">>"3H" flash in order	Manual: right turning
			All indicators flash slowly	Auto- running finished
Diagnose	Code	Fault	Suggestion	
	All indicators flash quickly with buzz	Power supply is overloaded	Stop using and contact after- sales	
	"WALL" & "2H" flash quickly with buzz	Driving motor 1 is overloaded	Check the belt	
	"FLOOR" & "3H" flash quickly with buzz	Driving motor 2 is	Check the belt	


				overloaded	
			"WALL", "FLOOR", "2H" & "3H" flash quickly with buzz	Cleaner is out of water and cannot be restarted	Empty the air inside the cleaner and restart it
5	AUTO START	Auto- start function	Indicator off: no reservation		
			Indicator on steadily: reserve successfully, and wait for the start		
			Indicator flashes: start working		

4.4 App control on smartphone via Bluetooth

4.4.1 Initial interface

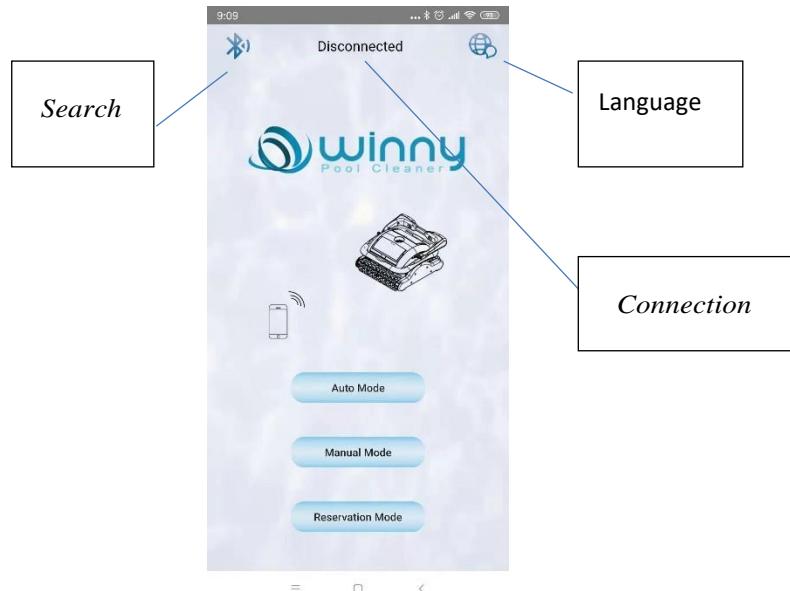


Open the app and connect with the cleaner

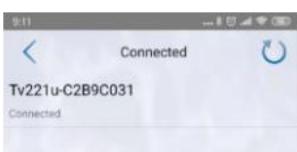


4.4.2 Interface of manual operation

No.	Indication	Function
1	Connection status	<ul style="list-style-type: none"> Disconnected Connected
2	Start to clean	Press to start the cleaner
3	Direction button	Press the button to left, ; right, forward and back to ; move the cleaner, the ; closer the button to the ; edge of the area, the faster the cleaner moves.
4	Direction control ;area	

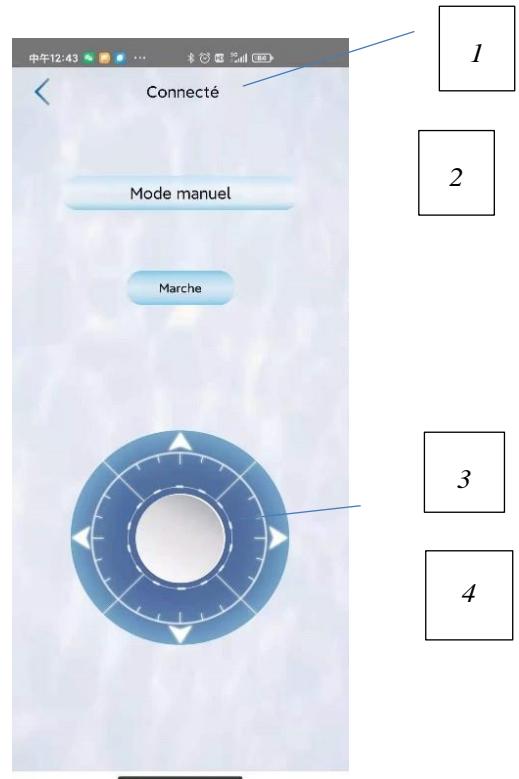


4.4.3 Interface of automatic operation

No.	Indication	Function
1	Connection status	<ul style="list-style-type: none"> Disconnected Connected
2	Auto mode	<ul style="list-style-type: none"> Pool floor - cleaning floor only Pool wall - cleaning wall only Once floor once wall Three times floor once walls
3	Start cleaning	<ul style="list-style-type: none"> Auto Play: work automatically according to your settings Stop: stop automatic working

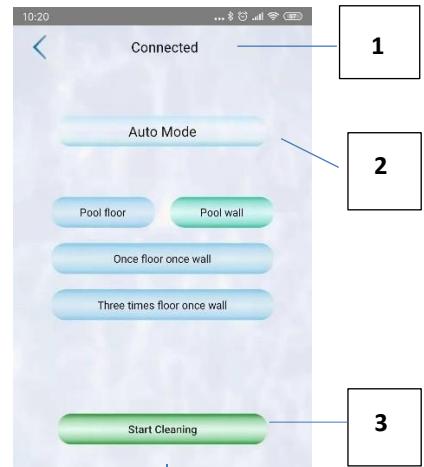

4.4.4 Interface of “Auto Start”

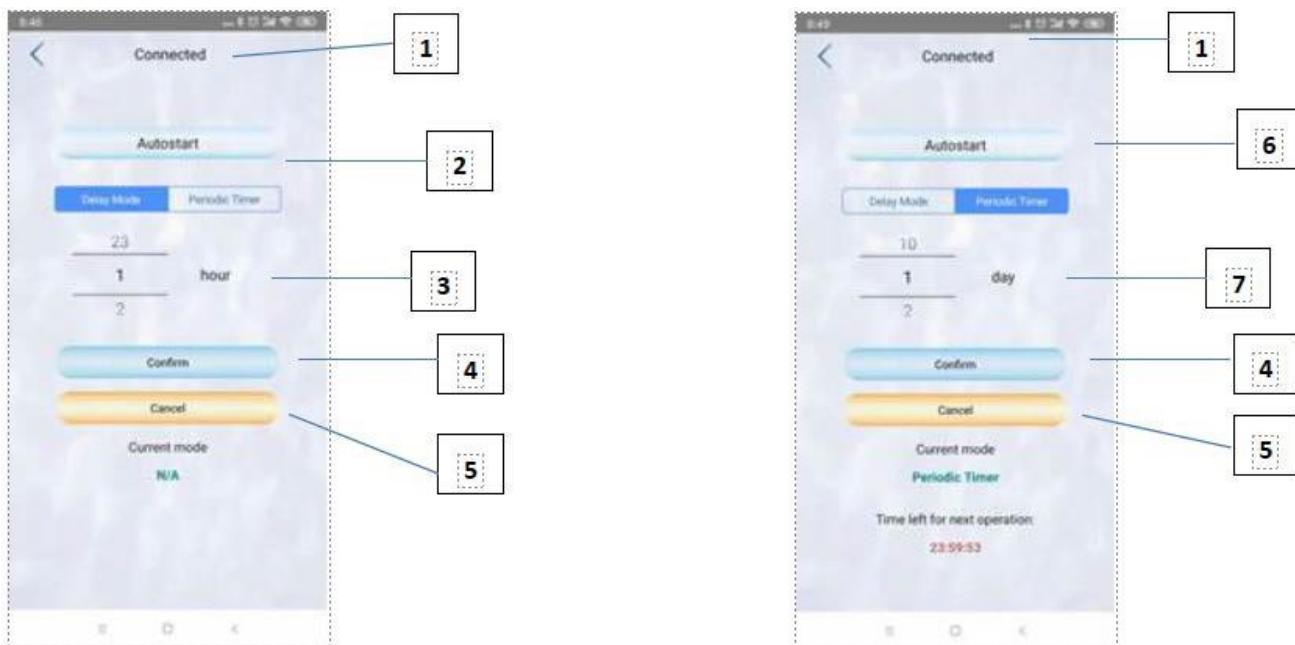

No.	Indication	Function
1	Connection status	<ul style="list-style-type: none"> ● Disconnected ● Connected
2	Single cleaning	Delay start
3	Setting for single cleaning	Range: 1 hour – 23hours
4	Confirm	By pressing this button, the APP on smartphone will send the current reservation settings to the power supply via Bluetooth, and start the timing at the same time.
5	Cancel	Press this button to cancel the current reservation
6	Periodic cleaning	Cycle working
7	Setting for periodic cleaning	Range: 1 day – 10 days

CAUTION:

The power unit needs to be powered on for more than eight hours when setting reservation. Otherwise, the reservation may fail.

4.4.5 Download address

For Android: search “Opson Pro” in Google (*Requires Android 8.0 and up)



PlayFor IOS: search “Opson Pro” in AppleStore (*Requires iOS 12.0 or later)

4.5 Taking the Cleaner Out of the Water

Pull the floating cable gently until the pool cleaner has risen to the surface then lift by; the handle.

CAUTION:

- Unplug power supply before taking the cleaner out of water.
- If the cleaner has not finished its cycle, switch off and unplug the power supply unit.;
- Do NOT lift the cleaner from the water by its cable.

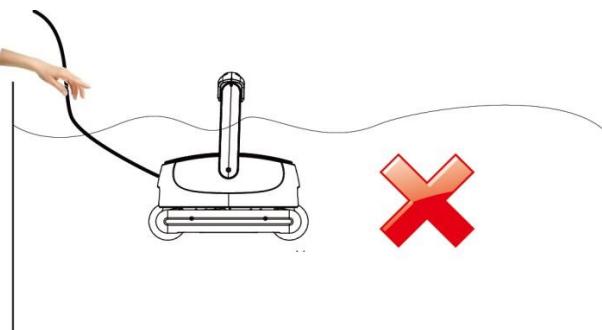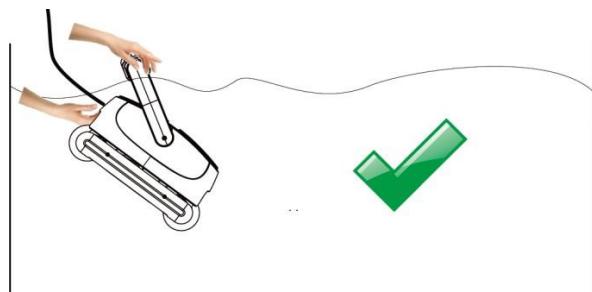

4.6 Filter cleaning

4.6.1 Take out the filter baskets:

- a. Press the opening button (see Figure 1)
- b. The top cover will pop- up automatically (see Figure 2)
- c. Open the top cover (see Figure 3)
- d. Take out the filter basket (see Figure 4)

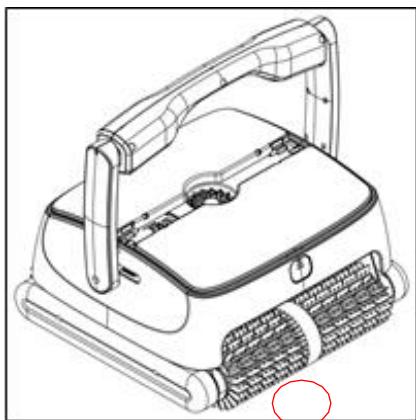


Figure 1

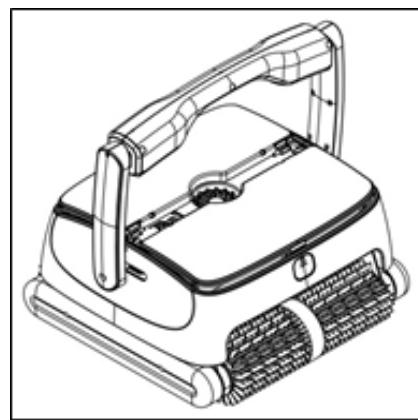


Figure 2

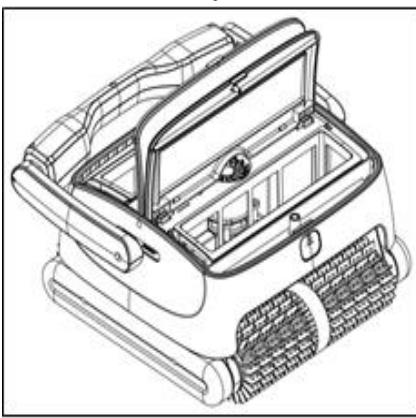


Figure 3


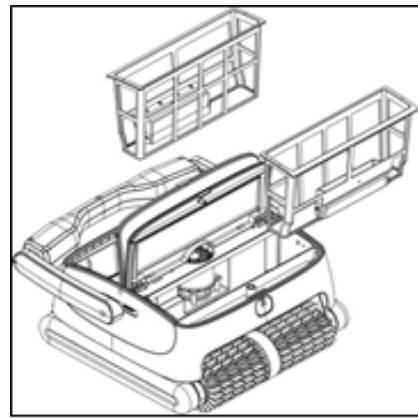



Figure 4

4.6.2 Clean the filter baskets

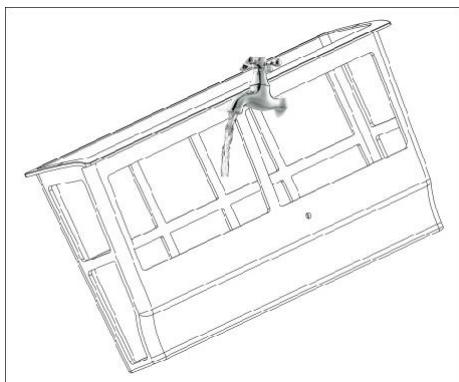


4.6.3 Re- install the filter baskets

Pay attention to the installation position and close the top cover.

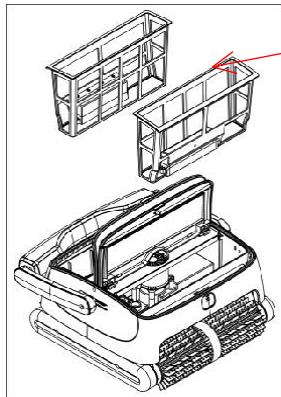

Wide side in the
middle

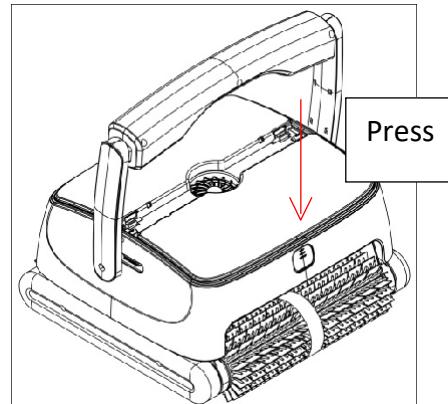

Press

4.7 Storage Advice

Coil the cable and store the cleaner in a cool and ventilated place.

- Do NOT store the cleaner exposed to direct sunlight, excessive heat and frost.
- The cleaner should be stored under the condition that 5°C- 35°C(50°F) - 35°C;(95°F),

RH<75%

V. Float block

Please refer to following operation if it is difficult for the cleaner to climb the wall and clean the waterline. The following operation is not necessary if the cleaner climbs the wall well.

Open the top cover and glue the float block at the position shown in the belowpicture.
The other side is also glued.



Note:

The float block has glue on its back, so it has to be glued on the top cover tightly and then put it into the pool 24 hours later.

VI. Packing list

No.	Item	Name	Model	QTY (pc)	Remark
1	Cleaner	Cleaner body	PR010999	1	In carton
2		Power supply	PR010999	1	In carton
3		Foam		2	In plastic bag
4		User manual & safety rope		1	In plastic bag

VII. Warranty

This product has passed all quality control and safety tests, conducted by the technical department of the factory.

Warranty information:

1. The warranty is covered for 24 months (only for motors &PCB) from the date of its original purchase.
2. This warranty is void if the product has been altered, misused, or has been repaired by unauthorized personnel.
3. The warranty extends only to manufacturing defects and does not cover any damage resulting from mishandling of the product by the owner.
4. The sales invoice must be presented for any claim or repair during the warranty period.

Please contact your local dealer for any warranty issues.

Environmental Programs, WEEE European Directive



Please respect the European Union regulations and help to protect the environment.

Return non-working electrical equipment to a facility appointed by your municipality that properly recycles electrical and electronic equipment.

Do not dispose them in unsorted waste bins.

For items containing removable batteries, remove batteries before disposing of the product.



GardenStore Nordic AB.
Maria Bangata 17, 118 63 Stockholm,
Tel: +46 8-622 60 00
Mail: Kundservice@gardenstore.se