


VENTURE DESIGN

HOME & INTERIOR



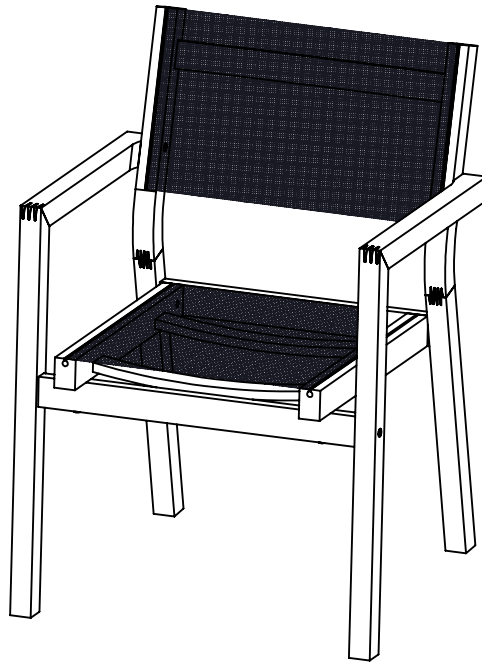



1233-076

Venice Stacking chair - Teak / Black textilene


Monteringsanvisning - Assemblyinstruction - Einbauzeichnung

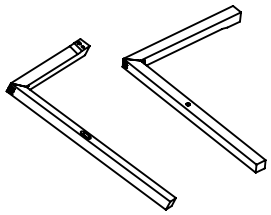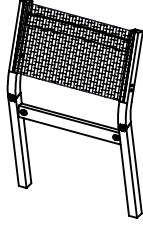

No.		Qty.
1		2
2		1
3		1
4		1

1999-5281	A		6
1999-5281	B		2
No	C		4
No	D		1

Step 1:

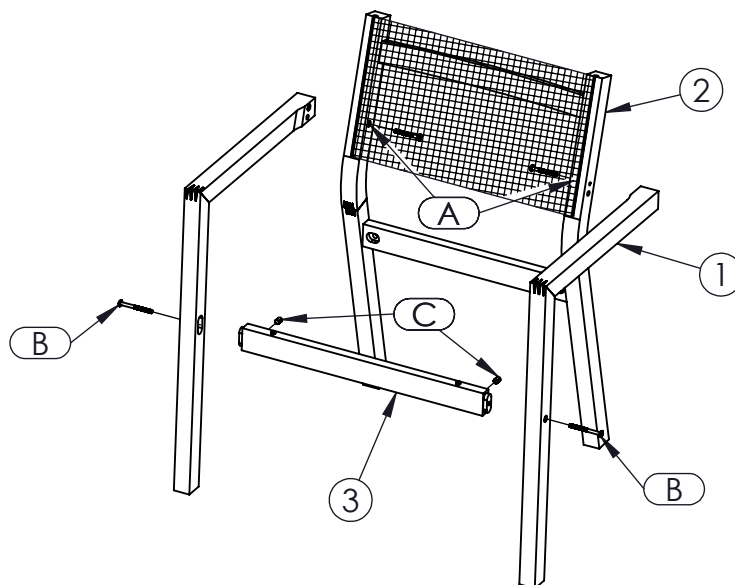


PLEASE KINDLY NOTE THAT AFTER ASSEMBLED , THEN TIGHTEN ALL THE SCREWS

OBSERVERA ATT EFTER MONTERING SÄTTAR DAN HELA SKRUVEN

BITTE BEACHTEN SIE, DASS NACH DEM ZUSAMMENBAU DIE SCHRAUBE ANZIEHEN

Step 2:

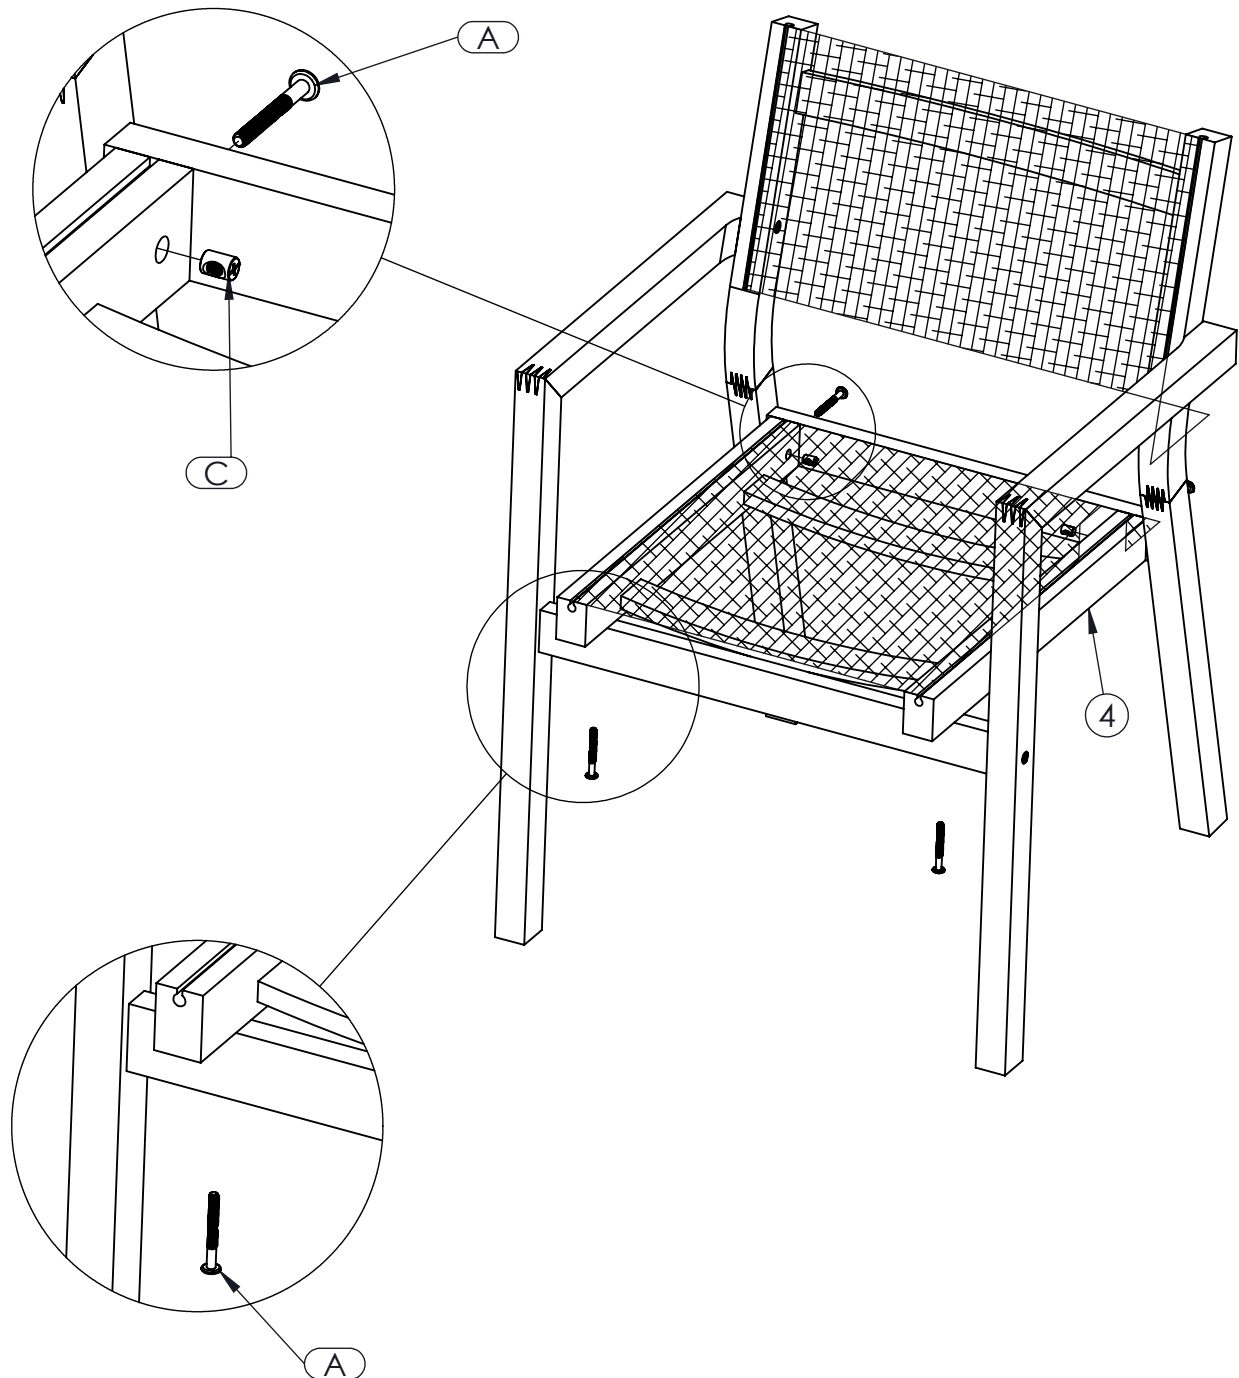

PLEASE KINDLY NOTE THAT AFTER ASSEMBLED , THEN TIGHTEN ALL THE SCREWS

OBSERVERA ATT EFTER MONTERING SÄTTAR DAN HELA SKRUVEN

BITTE BEACHTEN SIE, DASS NACH DEM ZUSAMMENBAU DIE SCHRAUBE ANZIEHEN

VENTURE DESIGN
HOME & INTERIOR