







Assembly Instructions

	IMAGE	QTY	PART		IMAGE	QTY	PART
①		1	Board	④		1	Back Fixing Bar
②		1	Frontal Fixing Bar	⑤		4	Setscrew
③		2	Bracket	⑥		4	Bolt

STEP 1



Remove the protective film from the board.

STEP 2




Align the board into the both fixing bars.

STEP 3



Mount the assemble board on the brackets and connect them with bolt ⑥ and ⑦. (It's recommend to place the board vertically when mounting the brackets.)

STEP 4

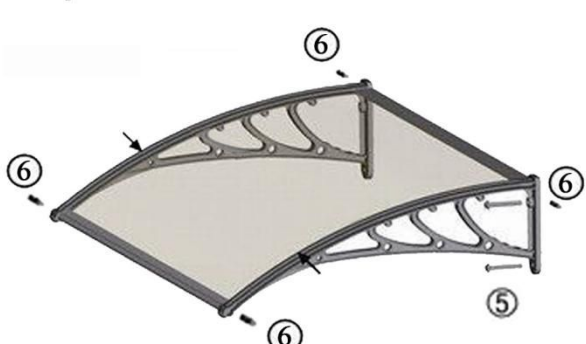

Drill four holes before installing the canopy. Make sure the holes you drill can exactly match to the holes of the bracket. Use setscrew ⑤ to fix the unit onto the desired location.

NOTE

It's recommended to install this unit with a minimum of 2 person.
Make sure that the desired location won't cause any possible injuries.
Regularly check all the fittings and connections. Tighten them up if loose.