

Assembly Instructions

	Drawing	Number	Indication		Drawing	Number	Indication
①		2	Board	④		2	Back Fixing Bar
②		2	Frontal Fixing Bar	⑤		6	Setscrew
③		3	Bracket	⑥		4	Bolt (big)
				⑦		2	Bolt (small)


STEP 1




STEP 2



STEP 3

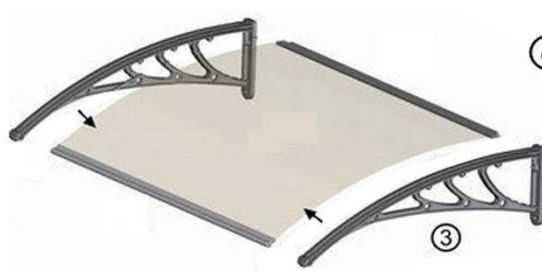

STEP 4

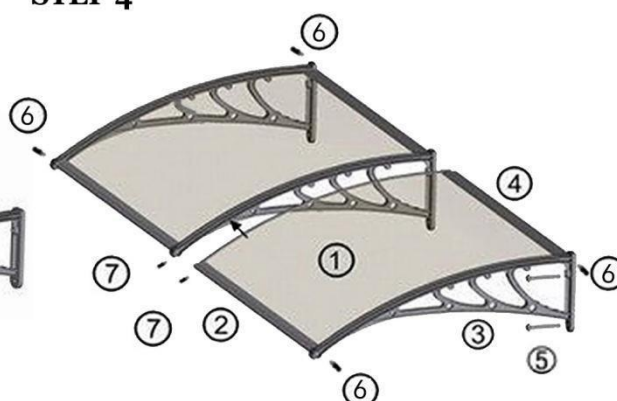

Remove the protective film from the board.

Align the board into the both fixing bars.

Mount the assemble board on the brackets and connect them with bolt $\varnothing 6$ and $\varnothing 7$.
(It's recommend to place the board vertically when mounting the brackets.)
Assemble the other canopy with one bracket in the same steps.

Drill six holes before installing the canopy. Make sure the holes you drill can exactly match to the holes of the bracket.
Use setscrew $\varnothing 5$ to fix the unit onto the desired location.

NOTE

It's recommended to install this unit with a minimum of 2 person.
Make sure that the desired location won't cause any possible injuries.
Regularly check all the fittings and connections. Tighten them up if loose.

Monteringsinstruktioner

Bild	Antal	Del
	2	Taskiva
	2	Främre fixeringsskena
	3	Konsol

Bild	Antal	Del
	2	Bakre fixeringsskena
	6	Infästningsskruv
	4	Skruv (stor)
	2	Skruv (liten)

STEG 1

Ta bort skyddsfilmen från taskivan.

STEG 2

För in taskivan i de båda fixeringsskenorna.

STEG 3

Fäst taskivan på konsolerna med skruv $\varnothing 6$ och $\varnothing 7$.
(Det rekommenderas att taskivan placeras vertikalt vid infästning i konsolerna.)

STEG 4

Borra sex hål innan skärmtaket installeras. Se till att hålen du borrar passar exakt med hålen i konsolerna.
Använd infästningsskruv $\varnothing 5$ för att installera skärmtaket på önskat ställe.

Följ samma steg för att fästa den andra taskivan med en konsol.

OBS

Det rekommenderas att minst två personer deltar vid installationen av skärmtaket. Se till att skärmtaket installeras så ett ställe som inte medför att skador eller olyckor kan uppstå.
Kontrollera regelbundet samtliga skruvarna och infästningarna. Skruva åt skruvarna vid behov.